


## MICROWAVE OVEN

This owner's guide book is for the following 800 watts microwave oven mode:

# DW-133G

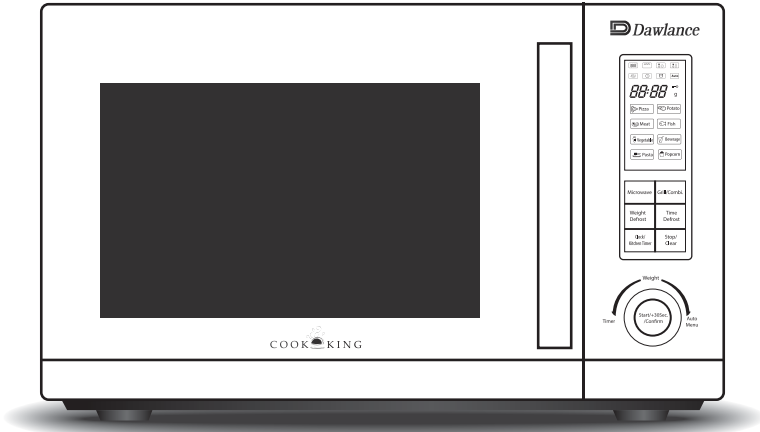

1. Read these instructions carefully before installing and operating the oven. Keep them for further reference.
2. Record in the space below the SERIAL NO. found on the nameplate on your oven and retain this information for future reference.

SERIAL NO.:

ڈاؤلینس ریڈائبل ہے!



# CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.....	2
SPECIFICATIONS.....	2
IMPORTANT SAFETY INSTRUCTIONS.....	3
TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION...	5
MATERIALS YOU CAN USE IN MICROWAVE OVEN.....	7
MATERIALS TO BE AVOIDED IN MICROWAVE OVEN.....	8
SETTING UP YOUR OVEN.....	8
TURNTABLE INSTALLATION.....	9
COUNTERTOP INSTALLATION.....	10
OPERATING INSTRUCTIONS.....	11
TROUBLESHOOTING.....	16
DAWLANCE CUSTOMER SERVICE CENTERS NETWORK.....	17

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

## ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

## SPECIFICATIONS

Model:	DW-133G
Rated Voltage:	230V~50Hz
Rated Input Power(Microwave):	1450 W
Rated Output Power(Microwave):	900 W
Rated Input Power(Grill):	1000 W
Oven Capacity:	30 L
Turntable Diameter:	∅ 315 mm
External Dimensions(WxDxH):	520 x 440 x 325.7mm
Net Weight:	Approx. 15.73 kg

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning:** It is hazardous for anyone other than a competent person to remove a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children less than 8 years old.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - By clients in hotels, motels and other residential type environments;
  - Farm houses;
  - Bed and breakfast type environments.

16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let the cord hang over edge of a table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore take care when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children shall not play with the appliance.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. Accessible parts may become hot during use. Young children should be kept away.
28. Steam cleaner is not to be used.
29. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
30. Only use the temperature probe recommended for this oven.(for ovens provided with a facility to use a temperature-sensing probe.)
31. **WARNING:** The appliance and its accessible parts become hot during use.Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.
32. The microwave oven must be operated with the decorative door open.(for ovens with a decorative door.)
33. The rear surface of appliance shall be placed against a wall.
34. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

# TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

## DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## WARNING

Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until the appliance is properly installed and grounded.


## CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven using a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:

Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

Two-round-pin plug

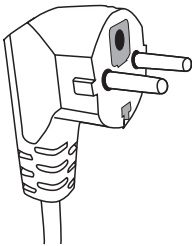

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - 2) The extension cord must be a grounding type 3-wire cord.
  - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## **CAUTION**

### **PERSONAL INJURY HAZARD**

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

## **UTENSILS**

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

### **UTENSIL TEST:**

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**



## MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
<b>Aluminium foil</b>	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. <b>Arcing can occur if foil is too close to oven walls.</b> The foil should be at least 2.5cm away from oven walls.
<b>Browning dish</b>	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
<b>Dinnerware</b>	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
<b>Glass jars</b>	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
<b>Glassware</b>	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
<b>Oven cooking bags</b>	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
<b>Paper plates and cups</b>	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
<b>Paper towels</b>	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
<b>Parchment paper</b>	Use as a cover to prevent splattering or a wrap for steaming.
<b>Plastic</b>	Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
<b>Plastic wrap</b>	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
<b>Thermometers</b>	Microwave-safe only (meat and candy thermometers).
<b>Wax paper</b>	Use as a cover to prevent splattering and retaining moisture.

## MATERIALS TO BE AVOIDED IN MICROWAVE OVEN


UTENSILS	REMARKS
Aluminium tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

## SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray.....01  
Turntable ring assembly.....01  
Turntable shaft.....01  
Instruction manual.....01  
Grill rack.....01

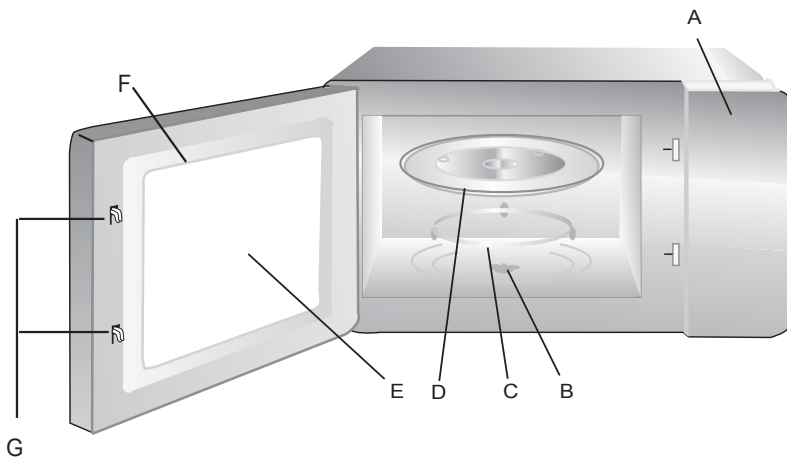


- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

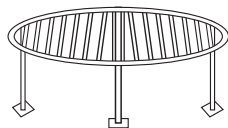

Grill Rack( Only be used in grill function and be placed on the glass tray )

## TURNTABLE INSTALLATION

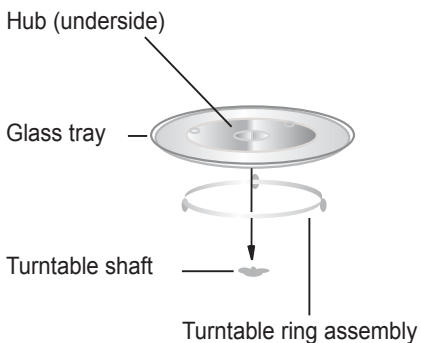

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## COUNTERTOP INSTALLATION


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

**Cabinet:** Remove any protective film found on the microwave oven cabinet surface.

**Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**

## INSTALLATION

1. Select a level surface that provides enough open space for the intake and/or outlet vents.

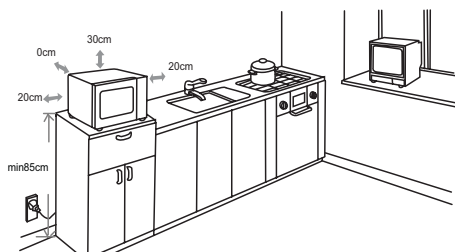

- (d) Blocking the intake and/or outlet openings can damage the oven.
- (e) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

- (a) The minimum installation height is 85cm.
- (b) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.
- (c) Do not remove the legs from the bottom of the oven.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

**The accessible surface may be hot during operation.**




# OPERATING INSTRUCTIONS

## 1. CLOCK SETTING

When the microwave oven is electrified, the LED will display "0:00", buzzer will ring once.

1) Press "**Clock/Kitchen Timer**" once to select clock function, the hour figures will flash.


---

2) Turn " " to adjust the hour figures, the input time should be within 0--23.

---

3) Press "**Clock/Kitchen Timer**", the minute figures will flash.

---

4) Turn " " to adjust the minute figures, the input time should be within 0--59.



---

5) Press "**Clock/Kitchen Timer**" to finish clock setting. ":" will flash, and the time will light.

**Note:** 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press "**Stop/Clear**", the oven will go back to the previous status automatically.


## 2. MICROWAVE COOKING

Press "**Microwave**" the LED will display "P100". Press "**Microwave**" for times or turn " " to choose the power you want, and "P100", "P80", "P50", "P30" or "P10" will display for each added press. Then press "**Start/+30Sec./Confirm**" to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press "**Start/+30Sec./Confirm**" again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven using the following steps.

1) Press "**Microwave**" once, the screen displays "P100".


---

2) Press "**Microwave**" once again or turn " " to choose 80% microwave power.

---

3) Press "**Start/+30Sec./Confirm**" to confirm, and the screen displays "P 80".

---

4) Turn " " to adjust the cooking time until the oven displays "20:00".

---

5) Press "**Start/+30Sec./Confirm**" to start cooking .



**Note:** The step quantities for the adjustment time of the coding switch are as follows:

0---1 min	:	5 seconds
1---5 min	:	10 seconds
5---10 min	:	30 seconds
10---30 min	:	1 minute
30---95 min	:	5 minutes



## "MICROWAVE" PAD INSTRUCTIONS

Order	Display	Microwave Power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

### 3. GRILL OR COMBI. COOKING

Press " **Grill/Combi.** " the LED will display "G", and press " **Grill/Combi.** " for times or turn the " " to choose the power you want, and "G", "C-1" or "C-2" will display for each added press. Then press " **Start/+30Sec./Confirm** " to confirm, and turn " " to set cooking time from 0:05 to 95:00. Press " **Start/+30Sec./Confirm** " again to start cooking.

**Example:** If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven using the following steps.


- 1) Press " **Grill/Combi.** " once, the screen displays "G".
- 2) Press " **Grill/Combi.** " once again or turn " " to choose combi. 1 mode.
- 3) Press " **Start/+30Sec./Confirm** " to confirm, and the screen displays "C-1".
- 4) Turn " " to adjust the cooking time until the oven displays "10:00".
- 5) Press " **Start/+30Sec./Confirm** " to start cooking .

## "GRILL/COMBI." PAD INSTRUCTIONS


Order	Display	Microwave Power	Grill Power
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

**Note:** If half the grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press "START/ +30SEC./ Confirm" to continue cooking. If no operation, the oven will continue working.


#### 4. QUICK START

- 1) In waiting state, press " **Start/+30Sec./Confirm** " to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave ,grill and combination cooking or time defrost state, each press of " **Start/+30Sec./Confirm** " can increase 30 seconds of cooking time.
- 3) In waiting state, turn "  " left to set cooking time with 100% microwave power, then press " **Start/+30Sec./Confirm** " to start cooking.


#### 5. DEFROST BY WEIGHT

- 1) Press " **Weight Defrost** " once, and the oven will display "dEF1".
- 2) Turn "  " to select the weight of food from 100 to 2000 g.
- 3) Press " **Start/+30Sec./Confirm** " to start defrosting.

#### 6. DEFROST BY TIME


- 1) Press " **Time Defrost** " once, and the oven will display "dEF2".
- 2) Turn "  " to select the defrost time. The MAX time is 95 minutes.
- 3) Press " **Start/+30Sec./Confirm** " to start defrosting.The defrost power is P30 , and it will not be changed.

#### 7. KITCHEN TIMER

- 1) Press " **Clock/Kitchen Timer** " twice, LED will display 00:00, clock indicator will light.
- 2) Turn "  " to enter the correct time.(The maximum cooking time is 95 minutes.)
- 3) Press " **Start/+30Sec./Confirm** " to confirm setting, clock indicator will be lighted.
- 4) When the kitchen time is reached, clock indicator will go out. The buzzer will ring 5 times. If the clock has been set (24-hour system), LED will display the current time.

**Note:** The kitchen time is different from 24-hour system Kitchen Timer is a timer.

## 8. AUTO MENU


1) Turn " " right to choose the menu, and "A-1" to "A-8" will display, which means pizza, meat, vegetable, pasta, potato, fish, beverage and popcorn.

2) Press "**Start/+30Sec./Confirm**" to confirm.

3) Turn " " to choose the default weight as the menu chart.

4) Press "**Start/+30Sec./Confirm**" to start cooking.

Example: If you want to use "Auto Menu" to cook fish for 350g.

1) Turn " " clockwise till "A-6" displays.

2) Press "**Start/+30Sec./Confirm**" to confirm.

3) Turn " " to select the weight of fish till "350" displays.

4) Press "**Start/+30Sec./Confirm**" to start cooking.

## THE MENU CHART:




Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverages	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360ml)	3
A-8 Popcorn	50 g	50
	85 g	85
	100 g	100



## 9. MULTI-SECTION COOKING

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:

- 1) Press "**Time Defrost**" once, and the oven will display "dEF2".
- 2) Turn " " to select the defrost time till "5:00" displays.
- 3) Press "**Microwave**" once, the screen display "P100".
- 4) Press "**Microwave**" once again or turn " " to choose 80% microwave power.
- 5) Press "**Start/+30Sec./Confirm**" to confirm and the screen displays "P80".
- 6) Turn " " to adjust the cooking time till the oven displays "7:00".
- 7) Press "**Start/+30Sec./Confirm**" to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. When cooking finishes the buzzer sounds five times.

## 10. INQUIRING FUNCTION

- 1) In states of microwave, grill and combination cooking, press "**Microwave**", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to its former state;
- (2) In cooking state, press "**Clock/Kitchen Timer**" to inquire the time and the time will display for 3 seconds.

## 11. LOCK-OUT FUNCTION FOR CHILDREN

Lock: In waiting state, press "**Stop/Clear**" for 3 seconds, there will be a long beep denoting entering the children-lock state and current time will display if the time has been set, otherwise, the LED will display "**⏸ : : ⏸**".

Lock quitting: In locked state, press "**Stop/Clear**" for 3 seconds, there will be a long "beep" denoting that the lock is released.

# TROUBLESHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven is operating, It is similar to the interference of small electrical appliances, like mixer, vaccum cleaner, and electric fan. It is normal.
Dim Oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on a cool place like an oven door. It is normal.
Oven started accidentally with no food in	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose off this product please do NOT dispose off this product with household waste. Please send this product to WEEE collecting points where available.

# DAWLANCE CUSTOMER SERVICE CENTERS NETWORK

**Head Office:** Dawlance Center 7/4, Civil Lines-9, Dr. Zia uddin Ahmed Road, Karachi:

**Ph:** (021) 35652450-9 **Fax:** (021) 35674643 **Email:** service@dawlance.com.pk

For All Complaints, Please dial

**03-111-11-7359(RELY) / 021-111-11-7359(RELY)**

**KARACHI (ZONAL OFFICE)**

Plot # Sc-7, Scheme # 7, Chandni Chowk, Off University Road.  
Ph:(021) 34923708-9

**KARACHI**

Plot # C-28C, 24th Commercial Street  
DHA Phase II Ext, DHA.  
Ph:(021) 36066798, 34223739

**KARACHI**

L-2526 Darakshan Society, Malir Kala Board Near Malir Town Office, Quaidabad.  
Ph:(021) 34518261, 34518269

**HYDERABAD**

Plot # A/ 151-A, Block C, Unit #2, Latifabad.  
Ph:(022) 3864640, 3811216

**FAISALABAD (ZONAL OFFICE)**

P-369, Jinnah Colony Behind Badar Bakery.  
Ph:(041) 2619774, 2634067

**SAHIWAL**

H #24/W, Scheme#2, Fareed Town.  
Ph:(040) 4551313-3

**SUKKUR**

H No. 1054/1-A, Bandar Road, Opp. Jama Masjid Near Edhi Center,  
Ph:(071) 5625842, 5625214

**QUETTA**

Gurdatt Singh Road, House # 53/3, Opp. Special Boys High School,  
Ph:(081) 2833406

**SARGODHA**

H No. 43-44, Dar Us Salama Rd, Sultan Colony Near Chenone Plaza, Sargodha Cant,  
Ph:(048) 3765905-6

**MULTAN**

H.# 12-A, Opposite Mohammad Arcade, Near Khana-e-Farhang Iran.  
Ph:(061) 6524355, 4782835

● **LAHORE (ZONAL OFFICE)**

309A, Shadman Colony Shadman.  
Ph:(042) 37533985-8

● **LAHORE**

2 / 1, Ghulam Ahmad Park, Near Saddar  
Round About.  
Ph:(042) 6684769, 8402037

● **JEHLUM (ZONAL OFFICE)**

B-II-IR, Mohammadi Chowk,  
Ph:(054) 4610578, 4623236

● **GUJRANWALA**

Plot # 1, Street 1, Fatima Homes, Bukhari  
Road, New Railway Station.  
Ph:(055) 3856442,3857602

● **RAWALPINDI (ZONAL OFFICE)**

36 - C - 1, Satellite Town.  
Ph:(051) 4841074, 4451101

● **ISLAMABAD**

4- Chenab Market, Street No. 34,  
G-7 / 1, Behind ZTE.  
Ph:(051) 2202977, 2204498

● **PESHAWAR**

House No: 06, Shadab Street, Near Gul  
Haji Plaza, University  
Road, Peshawar.  
Ph:(091) 5841281,5842540

● **SIALKOT**

Gulshan St # 1, Nishat Park, Paris Road,  
Opp. Chamber of Commerce Building  
Ph:(052) 4290502-3

● **HASSANABDAL**

CB - 284 / 1, Near Barrier # 3, Mall Road,  
Lalazar Colony, Wah Cantt.  
Ph:(051) 4510895, 4530206

## Zonal Offices:

<b>Zonal Manager Customer Service Karachi</b>	<b>(021)-34141501</b>
<b>Zonal Manager Customer Service Faisalabad</b>	<b>(041)-2638129</b>
<b>Zonal Manager Customer Service Lahore</b>	<b>(042)-35960272</b>
<b>Zonal Manager Customer Service Jhelum</b>	<b>(054)-4271406</b>
<b>Zonal Manager Customer Service Rawalpindi</b>	<b>(051)-4846409</b>
<b>Central Store</b>	<b>(021)-34141444</b>



**Dawlance**

88:88	g
Defrost	Reheat
Cook	Stop

Microwave	Convection
Stop	Start
Stop	Start

Power Control

Time

Start

Stop

**COOK KING**



 *Dawlance*

ڈاؤلینس ریلائبل ہے!

PN:261800318309