


Dawlance
ڈاؤلینس ریلائبل ہے!

Dawlance

Single Tub Washing Machine

User Manual


DW 5100 DC

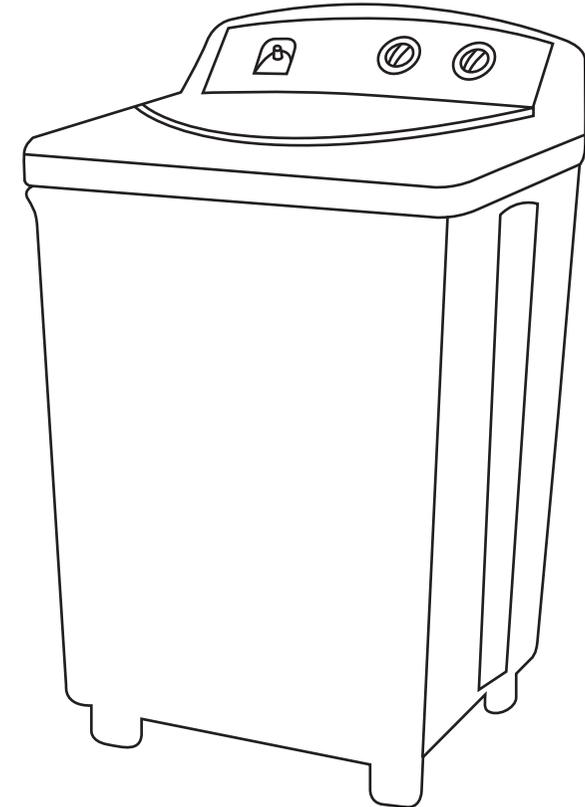


Before operating this unit, please read this manual thoroughly, and retain for future reference.

ڈاؤلینس ریلائبل ہے!

HOW TO USE

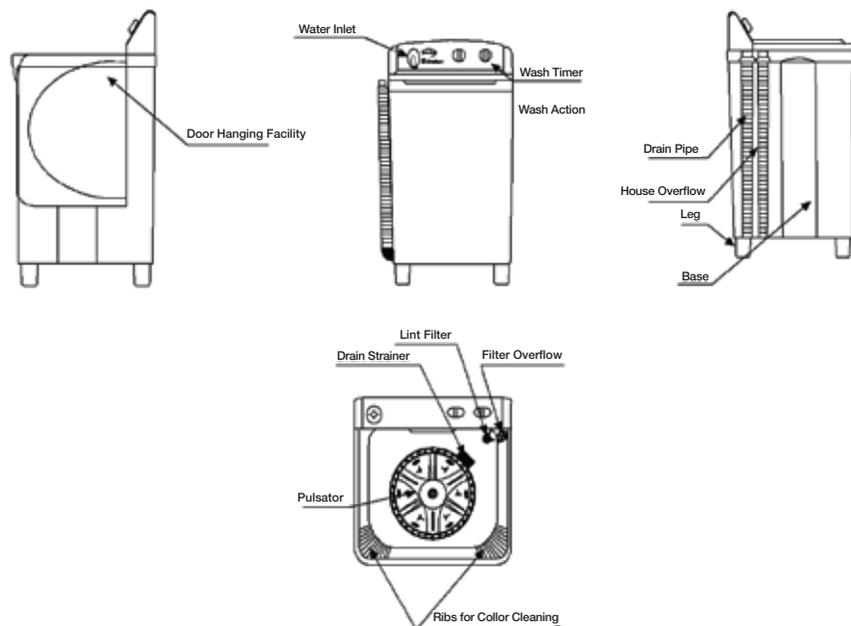

Control Panel

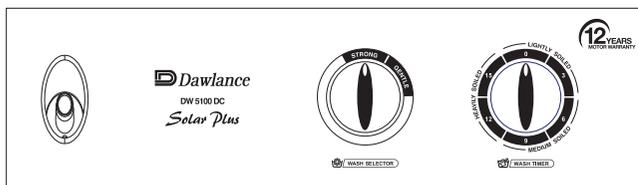

- 1. Water Inlet**
Connect the hose from the water faucet to feed water to the tub.
- 2. Wash Action**
Select wash action ("STRONG or NORMAL") or rinsing.
- 3. Wash Timer**
Used to select the desired time for washing or rinsing.

POSSIBLE CAUSE

HOW TO FIX IT

- **Washer does not start**

<ol style="list-style-type: none"> 1. Washer may not be plugged in or connection may be loose. 2. House fuse blown or circuit breaker tripped. 3. Wash timer is not set. 	<ol style="list-style-type: none"> 1. Make sure the plug is tightly pushed into wall outlet. 2. Electrical line is overloaded. Do not run other appliances when washer is in use. 3. Electrical lines may be inadequate. Contact an electrician. 4. Inappropriate house fuse or circuit breaker is being used. Use only a 15 amp, time delay fuse or circuit breaker. 5. Set the wash timer.
---	---

- **Rattling and clanking noise**

<ol style="list-style-type: none"> 1. Foreign objects such as coins or safety pins may be in the tub. 2. Belt buckets and metal fasteners are hitting the washer tub during the washing cycle. 	<ol style="list-style-type: none"> 1. Stop machine and check the tub. 2. Call your authorized service agency. 3. To prevent unnecessary noise and damage to the tub, fasten fasteners and turn garments inside out.
--	--

- **Vibrating noise**

<ol style="list-style-type: none"> 1. Washer is not levelled and levelling legs screws may not be securely tightened. 2. Clothes not evenly distributed in tub. 3. Washer may not be installed on a solid, firm floor. 	<ol style="list-style-type: none"> 1. Relevel washer by adjusting levelling legs, screw must be tightened. 2. Stop washer and redistribute clothes. 3. Additional floor bracing may be needed. Contact carpenter to correct sagging or slopping floor.
---	---

- **Thumping sound**

<ol style="list-style-type: none"> 1. Heavy wash loads may produce a thumping sound at the beginning. 	<ol style="list-style-type: none"> 1. This is normal. 2. If sound continues stop machine, redistribute clothes.
--	---

SPECIFICATION

Model No.	DW 5100 DC
Intended use	Household
Type of appliance	Single Tub
Power source	Refer to specification LABEL
Dimensions (units: mm)	550 x 540 x 990
Appliance weight	20 Kg
Rated operating time	Washing: 1 hour operation
Protection against electric shock	Class 1 appliance
Protection against moisture	Splash-proof appliance
Standardized water consumption	64 (High), 56 (Medium), 48 (Low) (Litres)

Design and specifications could be changed without notice.

INSTALLATION

Location & Environment

- ★ Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electric shock hazard.
- ★ Place washer on a sturdy flat surface. If the washer is placed on an uneven or weak surface, noise or vibrations may occur. (Allowable inclination is max. 2 degrees).
- ★ Avoid direct sunlight or heating device. As plastic and electrical components are affected by direct heat. Never place the washer near heater, boilers etc...
- ★ Do not place or store the washer below 0°C(32°F) to avoid any damage from freezing.

Electrical Connection

- ★ This unit is designed to operate from an adequate supply mentioned at the rating label stuck to the rear of it.

Caution: If the power cord is damaged, it should be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.


HOW TO WASH

Preparation

- ★ Sort the clothes into groups-white, colorfast, non-colorfast, delicates, lint free, lint producer, etc., and wash according to the **LAUNDRY GUIDE**. (See Laundry Guide).
- ★ Clothes with worn or torn patches should first be mended. Empty out all pockets and close all side fasteners. (pocket, covers, belts, etc). Treat bad stains prior to washing.
- ★ Insert power cord plug into the power point and switch on.

How to Wash

1. Set the wash timer knob to position "0".
2. Select the wash action to the "STRONG" or "NORMAL" position.
3. Place the cover flow hose flat on the floor.
4. Before feeding water to the tub be sure that drain hose is hooked properly to the tub as show picture-A.
5. Open the water faucet and feed water to the water level indicated inside the wash tub.
6. Put detergent and laundry into the wash tub.
7. Set wash time by the wash timer.
8. When washing is finished, drain the wash tub by placing the drain hose flat on the floor, as shown in figure-B.
9. You can clean extremely soiled portions of clothes like collar etc. by rubbing them on ribs given on upper side of your washer tub as shown in figure-C.

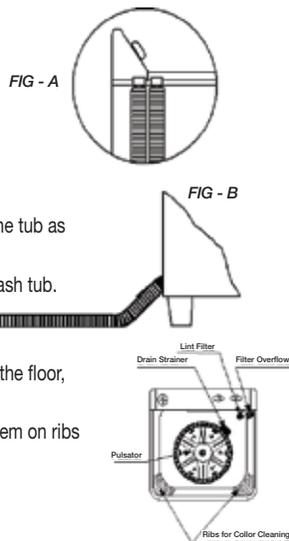

HOW TO RINSE

1. Set the wash action to the ("STRONG or NORMAL") position.
2. Turn the water tap on.
3. Place the cover flow hose flat on the floor.
4. When the rinsing water becomes clear, turns off the water tap.
5. When rinsing is finished drain the wash tub by placing the drain hose flat on the floor.

LAUNDRY GUIDE

Washing Time & Wash Action Table

KIND OF CLOTHING	WASHING TIME	WASHING TIME
Extremely soiled heavy fabric	10-15 minutes	STRONG
Linen, cotton, etc.	8-10 minutes	
Ordinary clothes (underwear, etc.)	7 minutes	NORMAL
Slightly soiled synthetic fiber	2-5 minutes	
100% wool, mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2-5 minutes	

- **Water level** HIGH (64L) ▶ **H**
When you fill the water up in the wash tub, refer the lower line of each marks on the overflow filter.
- MID (56L) ▶ **M**

CLEANING AND MAINTENANCE


At the end of every washing:

- Switch off the electricity.
- Ensure that timer knob reached back to "0" position.
- Wipe off spillage (detergent powder, etc.) and generally wipe over the tub and base with a dry duster.

Note: Cleaning after use will extend the life of your washing machine. Before cleaning disconnect the power cord from the electrical outlet.

Overflow Filter and Lint Filter

- Step I Remove the overflow filter by pulling it forward.
- Step II Wash off the lint stuck on the overflow filter during overflowing.
- Step III Re-fix the overflow filter by first inserting its bottom section and then pushing the upper part firmly into the socket.

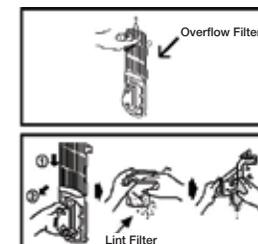

Note: If during washing, some residue or deposits have accumulated in the net, then after finish washing, remove the filter by first push down and pull it out as shown in figure.

Cleaning of dirt underneath Pulsator & on Drain Strainer

Dirt, lint etc. may accumulate underneath the pulsator and on a Drain Strainer. Carry out cleaning after every four to six washes or whenever required, as per following procedure.

- Step I After finishing the wash, fill the wash tub upto three quarters with clean lukewarm water.
- Step II Set wash action to "STRONG" position.
- Step III Operate washer for 10 minutes.
- Step IV Drain out the water.

Note: The above procedure will remove the dirt, lint etc. accumulated underneath the pulsator and on the drain strainer.

Cautions

- Do not connect to the hot water supply.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This product should not be disposed with other household wasters. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection system or contact the retailer where the product was purchased. They can take this product for environment safe.

POINTS TO REMEMBER

- Avoid using excessive amounts of bleach, soap powder or detergent. Use the amount recommended by the respective manufacturers.
- If the machine is installed in areas subject to freeze, ensure that it is completely drained after use.
- When washing delicate, clothes e.g., silks, fine nylons, laces etc., it is advisable to place them in a mesh bag to prevent them from possible damage.
- Do not wash lint attracting fabrics with lint producers, e.g., black socks or dark colored jumpers with white fluffy towels, napkins, etc.
- Avoid placing a wet load on the control panel.
- Do not move machine in left or right direction because wheels are unidirectional.

BEFORE YOU CALL FOR SERVICE

There may be times when your suspend washing machine requires maintenance. Before calling for service please check the following points. You may be pleasantly surprised that an apparent malfunction can be easily rectified as follows.

Dawlance

دستیج ترین سروس سینٹرنیٹ ورک ملک بھر میں 200 سے زائد مراکز کیساتھ



ڈاؤ لینس ریلائبل سروس تمام گھریلو مصنوعات کے لئے

سروسز آپ کی دہلیز پر 24 گھنٹے کے اندر

کال سینٹر کی سہولت پورا ہفتہ صبح 8:30 سے رات 8:30 تک

UAN # 021-111-11-7359 (RELY)

Head Office: Dawlance Center 7/4, Civil Lines-9

Dr. Ziauddin Ahmed Road, Karachi.

Ph: (021) 35652450-9

E-mail: customer.service@dawlance.com.pk

Website: www.dawlance.com.pk

ڈاؤ لینس ریلائبل ہے!