

Dawlance
ڈاؤلینس ریلائبل ہے!

Dawlance

MICROWAVE OVEN

DW 380 C
Owner's Manual



Please read these instructions carefully before installing and operating the oven.
Record in the space below the SERIAL NO. found on the nameplate on your
oven and retain this information for future reference.

SERIAL NO.

ڈاؤلینس ریلائبل ہے!

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY	1
SPECIFICATIONS	2
BEFORE YOU CALL FOR SERVICE	2
INSTALLATION	2
GROUNDING INSTRUCTIONS	3
RADIO INTERFERENCE	3
IMPORTANT SAFETY INSTRUCTIONS	3
MICROWAVE COOKING PRINCIPLES	6
UTENSILS GUIDE	6
PARTS NAME	7
CONTROL PANEL	8
HOW TO SET THE OVEN CONTROLS	9
SETTING THE CLOCK	9
QUICK START	9
MICROWAVE COOKING	9
GRILL & MICRO. + GRILL	10
TURN GRILL & MICROWAVE + TURN GRILL	10
CONVECTION	11
CONVECTION + TURN GRILL	12
MICRO. +CONVECTION	12
CONVECTION + TURN GRILL + MICROWAVE	13
DEODORIZE	13
KEEP WARM	13
MULTI-STAGE COOKING	13
AUTOMATIC PROTECTION MECHANISM	14
CHILD PROOF LOCK	14
CLEANING AND CARE	15

For menu and recipe details, please refer to the recipe book.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - a. Door (bent),
 - b. Hinges and latches (broken or loosened),
 - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Power Consumption:	230V/50Hz, 1500W (Microwave)
	2050W (Convection)
	1250W (Grill)
Rated Microwave Output:	1000W
Operation Frequency:	2450MHz
Outside Dimensions:	311mm(H)×553mm(W)×500mm(D)
Oven Cavity Dimensions:	250mm(H)×376mm(W)×404mm(D)
Oven Capacity:	38 Litres
Cooking Uniformity:	Turntable System
Net Weight:	Approx.18.6kg

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
3. Check to ensure that the control panel is programmed correctly and the timer is set.
4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.

INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow minimum 20cm of free space necessary above the top surface of the oven and 5cm at both sides. The microwave oven rear plate must be placed close to the wall. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING: Improper use of the grounding plug can result in a risk of electric shock.

Note

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING: To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
6. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
7. To reduce the risk of fire in the oven cavity:
 - a) When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
 - b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - c) If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
 - e) The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
8. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.

18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. The microwave oven is only used in freestanding.
21. **WARNING:** Do not install oven over a range cook top or other heat-producing appliance. If installed could be damaged and the warranty would be void.
22. The microwave oven shall not be placed in a cabinet.
23. The door or the outer surface may get hot when the appliance is operating.
24. **Warning:** Accessible parts may become hot during use. Young children should be kept away.
25. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
26. The temperature of accessible surfaces may be high when the appliance is operating.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turntable before you move the appliance to avoid damages.
33. **Caution:** It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting, cooking and steaming of food only.
35. Use gloves if you remove any heated food.
36. **Caution!** Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

UTENSILS GUIDE


1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
4. Round/oval dishes rather than square/oblong ones are recommend, as food in corners tends to overcook.
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.

The list below is a general guide to help you select the correct utensils.

Cookware	Microwave	Grill	Convection	Combination*
Heat-Resistant Glass	Yes	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No	No
Kitchen Paper	Yes	No	No	No
Metal Tray	No	Yes	Yes	No
Metal Rack	No	Yes	Yes	No
Aluminum Foil & Foil Container	No	Yes	Yes	No

* Combination: Applicable for both "microwave + grill", and "microwave + convection" cooking.

PARTS NAME

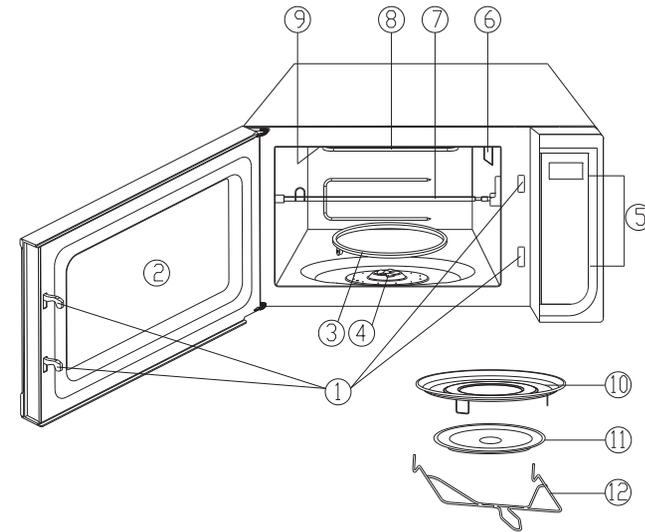

1. Door Safety Lock System
2. Oven Window
3. Roller Ring
4. Shaft
5. Control Panel
6. Wave Guide (Please do not remove the mica plate covering the wave guide)
7. Rotisserie Rack
8. Grill Heater1
9. Grill Heater2
10. Baking Plate
11. Glass Tray
12. Handle

CONTROL PANEL



Display Screen

Cooking time, power, indicators and present time are displayed.

Quick Cook Buttons

Instant settings to cook popular foods.

Number Pads

Use to enter clock, cooking time, temperature, etc.

Deodorize/Keep Warm

Use to set deodorize or a keep warm program.

Power Level

Press to select microwave power level.

Micro+ Conv.

Press to select one of four combination cooking settings.

Weight/Clock

Use to set the clock and the weight of the food.

Grill/Micro+ Grill

Press to set a grill-cooking program or one of two combination cooking settings.

Conv./Conv.+ Turn Grill

Press to program convection cooking or conv. + turn grill cooking.

Conv.+ Turn Grill+ Micro.

Press to select conv. +turn grill +micro cooking program.

Turn Grill/Turn Grill+ Micro.

Touch to set a turn grill cooking or a turn grill+ micro. Cooking.

Cancel

Touch to stop cooking program or clear all previous settings before cooking starts.

It also used to set child lock.

Start/Quick Start

Press to start a cooking program and to set quick start cooking program.

HOW TO SET THE OVEN CONTROLS

- When the oven first plugged in, the display will show "CLOCK".
- During cooking setting process, if there is not any operation within 20 seconds, the oven will return to waiting mode.
- During cooking, press CANCEL pad once to pause, and then press START/QUICK START button to resume, but if you press CANCEL pad twice can cancel the program.
- After cooking program has finished, the buzzer will sound beeps once every 2 minutes with END showing on screen, press any button or open oven door to clear that before setting another function.
- This system of the microwave oven has the feature of cooling. As for any cooking mode which cooking time above 2 minutes, after finishing cooking, the oven fan will work about 3 minutes automatically to cool the oven for prolonging the life of the oven.

SETTING THE CLOCK

This is a 12 or 24 hours cycle. You can choose it by touching WEIGHT/CLOCK pad.

FOR EXAMPLE: Suppose you want to set the oven clock time to 8:30.

1. In standby mode, press WEIGHT/CLOCK once or twice to choose 12 or 24 hour clock.
2. Use the number pads to enter clock time "8:30".
3. Press WEIGHT/CLOCK to confirm.

QUICK START

Use this feature to program the oven to start at 100% power conveniently. The max time can be set is 10 minutes. In standby mode, press START/QUICK START button in quick succession to set the cooking time and the ovens will auto-start cooking immediately.

MICROWAVE COOKING

Microwave cooking allows you to customize cooking power and time. First, select a power level by pressing the POWER LEVEL button (see the table below). Then use number pad enter cooking time. Maximum cooking time is 99 minutes and 99 seconds. The oven will start cooking after you press START/QUICK START pad.

Suppose you want to cook for 5 minutes at 60% power level.

1. Open the oven door and place the food, close it.
2. Presses POWER LEVEL button a number of times till the screen show the intended power.

Press POWER LEVEL button	Power Level (Display)	Press POWER LEVEL button	Power Level (Display)
Once	100%(P100)	7 times	40%(P-40)
Twice	90%(P-90)	8 times	30%(P-30)
Thrice	80%(P-80)	9 times	20%(P-20)
4 times	70%(P-70)	10 times	10%(P-10)
5 times	60%(P-60)	11 times	0%(P-00)
6 times	50%(P-50)		

- Use the number pads to enter cooking time.
- Press START/QUICK START button to start.

NOTE: You can check the power while cooking is in progress by pressing the POWER LEVEL button. If you want to cook at full power level, omit the second step.

GRILL & MICRO. + GRILL

Grill Cooking

Grill cooking is particularly useful for thin slices of meat, steaks, chops, kababs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes. Maximum cooking time is 99 minutes and 99 seconds.

Suppose you want to program grill cooking for 12 minutes.

- Open the oven door and place the food, close it.
- Press GRILL/MICRO. + GRILL button once.
- Use the number pads to enter cooking time.
- Press START/QUICK START button.

Micro. + Grill Cooking

This feature allows you to combine grill with microwave cooking on two different settings by touching GRILL/MICRO. + GRILL pad twice or thrice. The longest cooking time is 99 minutes and 99 seconds. During cooking, you can see the programmed setting by pressing this button.

Suppose you want to set combination cooking for 25 minutes.

- Open the oven door and place the food, close it.
- Press GRILL/MICRO. + GRILL button twice or 3 times.

Press GRILL/MICRO. + GRILL button	Combination	Cooking time		Use
		Microwave	Grill	
Twice	C0-1	30%	70%	fish, potatoes or au gratin
3 times	C0- 2	55%	45%	pudding, omelets, baked potatoes and poultry

- Use the number pads to enter cooking time.
- Press START/QUICK START to start.

TURN GRILL & MICROWAVE + TURN GRILL

Turn Grill Cooking

The feature allows you to set grill cooking with the food keep turning during cooking process. The longest cooking time is 99 minutes and 99 seconds.

Suppose you want to program cooking for 32 minutes with the Turn Grill feature.

- Open the oven door and place the food, close it.
- Touch TURN GRILL/TURN GRILL+ MICRO pad once.
- Touch number pads to enter 32:00.
- Touch START/QUICK START pad.

Turn Grill + Microwave Cooking

The feature allows you to combine microwave cooking with the turn grill feature so as to achieve best cooking result. The longest cooking time is 99 minutes and 99 seconds. During cooking, you can see the programmed setting by pressing this button.

Suppose you want to set combination cooking for 25 minutes.

- Open the oven door and place the food, close it.
- Press TURN GRILL/TURN GRILL+ MICRO button twice or 3 times.

Press TURN GRILL/TURN GRILL+MICRO. button	Combination	Cooking time		Use
		Microwave	Turn Grill	
Twice	C-1	30%	70%	fish, potatoes or au gratin
3 times	C- 2	55%	45%	pudding, omelets, baked potatoes and poultry

- Use the number pads to enter cooking time.
- Press START/QUICK START to start.

CONVECTION

During convection cooking, hot air is circulated throughout the oven cavity to brown and make crisp foods quickly and evenly. This oven can be programmed for ten different cooking temperatures. Maximum cooking time for convection is 99 minutes and 99 seconds. During cooking you can check the power level by touching CONV. /CONV. + TURN GRILL pad.

To Cook with Convection

To cook with convection, press CONV. /CONV. + TURN GRILL button repeatedly to enter the desired convection temperature. (110~200°C)

Suppose you want to cook at 180°C for 40 minutes.

- Open the oven door and place the food, close it.
- Press CONV. /CONV. + TURN GRILL button repeatedly to select cooking temperature as shown on screen.
- Use the number pads to enter cooking time.
- Press START/QUICK START button to start.

To Preheat and Cook with Convection

Your oven can be programmed to combine preheating and convection cooking operations.

Suppose you want to preheat to 170°C and then cook 35 minutes.

- Press CONV. /CONV. + TURN GRILL button repeatedly to select cooking temperature as shown on screen.
- Press START/QUICK START button to start. Beeps will sound when the designated temperature is reached.
- Open the door and place container of food at the center of the turntable.
- Use the number pads to enter cooking time.
- Press START/QUICK START button to start.

NOTE: When the oven reaches preheat time, the oven will sound beep and start 10 minutes countdown to remind user to place food into the oven. If user doesn't have any operation within this 10 minutes, after 10 minutes countdown finished, the display will show END.

CONVECTION + TURN GRILL

To Cook with Convection + Turn Grill

The longest cooking time is 99 minutes and 99 seconds. This feature allows you to cook with combined turn grill and convection. This oven can be programmed for ten different cooking temperatures from 110°C to 200°C.

Suppose you want to cook for 10 minutes at 170°C using this feature:

1. Open the oven door and place the food, close it.
2. Touch CONV. /CONV. + TURN GRILL pad for 3 seconds.
3. Touch CONV. /CONV. + TURN GRILL pad continuous to select cooking temperature.
4. Touch number pads to enter cooking time 10:00.
5. Touch START/QUICK START pad.

NOTE: During cooking you can check the power level by touching CONV. /CONV. + TURN GRILL pad.

To Preheat and Cook with Convection +Turn Grill

Your oven can be programmed to combine preheating and convection cooking operations.

Suppose you want to preheat to 170°Cand then cook 35 minutes.

1. Touch CONV. /CONV. + TURN GRILL pad for 3 seconds.
2. Press CONV. /CONV. + TURN GRILL button repeatedly to select cooking temperature as shown on screen.
3. Press START/QUICK START button to start. Beeps will sound when the designated temperature is reached.
4. Open the door and place container of food at the center of the turntable.
5. Use the number pads to enter cooking time.
6. Press START/QUICK START button to start.

NOTE: When the oven reaches preheat time, the oven will sound beep and start 10 minutes countdown to remind user to place food into the oven. If user doesn't have any operation within this 10 minutes, after 10 minutes countdown finished, the display will show END.

MICRO. +CONVECTION

This oven has four pre-programmed settings that make it easy to cook with both convection heat and microwave automatically. The longest cooking time is 99 minutes and 99 seconds.

Press MICRO. + CONV. button repeatedly to program convection temperature:

	Touch MICRO. + CONV. button	Temperature (°C)
Comb1	Once	110
Comb2	Twice	140
Comb3	3 times	170
Comb4	4 times	200

Suppose you want to cook for 24 minutes on COMB3.

1. Open the oven door and place the food, close it.
2. Press MICRO. + CONV. button 3 times.
3. Use the number pads to enter cooking time.
4. Press START/QUICK START button to start.

NOTE: During cooking you can check the power level by touching MICRO. + GRILL pad.

CONVECTION + TURN GRILL + MICROWAVE

The longest cooking time is 99 minutes and 99 seconds. This feature is different in that it allows you to cook with convection and microwave power with the food being turned around in the chamber so as to get the best cooking result.

Use CONV. + TURN GRILL+MICRO pad to enter temperature:

Touch CONV. + TURN GRILL+MICRO.	Temperature (°C)
Once	110
Twice	140
3 times	170
4 times	200

Suppose you want to cook with this feature for 10 minutes at 140°C:

1. Open the oven door and place the food, close it.
2. Touch CONV. + TURN GRILL+MICRO pad 2 times to set 140°C.
3. Touch number pads to enter cooking time 10:00.
4. Touch START/QUICK START pad.

DEODORIZE

Deodorize function help you to fresh the air in the oven.

You can take the steps below:

1. Press DEODORIZE/KEEP WARM button once.
2. Press START/QUICK START button.

KEEP WARM

To use this feature, you can take the steps below:


1. Press DEODORIZE/KEEP WARM button twice.
2. Use the number pads to set the time.
3. Press START/QUICK START button.

NOTE: The longest time you can set is 99:99.

MULTI-STAGE COOKING

Your oven can be programmed for up to 3 automatic cooking sequences.

Suppose you want to set the following cooking program:

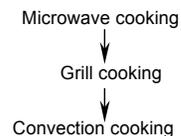

1. Open the oven door and place the food, close it.
2. Input Microwave cooking program. Do not touch START/QUICK START pad.
3. Input Grill cooking program. Do not touch START/QUICK START pad.

4. Input Convection cooking program.
5. Press START/QUICK START pad to confirm.

NOTE: Menu cook cannot be set in a multi-stage cooking program. Convection + Turn Grill cooking can only be set in the first stage.

AUTOMATIC PROTECTION MECHANISM

1. When the system enters into super high temperature protection status, the digital display shows "E01" and continues to beep till the system comes back to normal condition and then press CANCEL pad.
2. When the system enters into super low temperature protection status, the digital display shows "E02" and continues to beep till the system comes back to normal condition and then press CANCEL pad.
3. The system enters into protection mode when the system sensor is Short Circuited. The display shows "E03" and continues to beep until troubleshooting, press CANCEL pad to enter standby mode. Call consumer service to check and replace the faulty sensor.

CHILDPROOF LOCK

The childproof lock prevents unsupervised operation by little children.

To set the child proof lock: Press CANCEL button for 3 seconds, then a beep will sound and the indicator light will turn on. In the lock state, all buttons are disabled.

To cancel the child proof lock: Press CANCEL button for three seconds, then a beep will sound and indicator light will turn off.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
12. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
13. Please do not dispose this appliance into the domestic rubbish bin, it should be disposed to the particular disposal center provided by the municipalities.
14. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

Dawlance

وسیع ترین سروس سینٹر نیٹ ورک ملک بھر میں 200 سے زائد مراکز کیساتھ



ڈاؤ لینس ریلائبل سروس تمام گھریلو مصنوعات کے لئے

سروسز آپ کی دہلیز پر 24 گھنٹے کے اندر

کال سینٹر کی سہولت پورا ہفتہ صبح 8:30 سے رات 8:30 تک

UAN # 021-111-11-7359 (RELY)

Head Office: Dawlance Center 7/4, Civil Lines-9

Dr. Ziauddin Ahmed Road, Karachi.

Ph: (021) 3562450-9

E-mail: customer.service@dawlance.com.pk

Website: www.dawlance.com.pk

ڈاؤ لینس ریلائبل ہے!