




Before using your Electric Kettle, please read this manual carefully and keep it for future reference.

# Electric Kettle

## User Manual

**MODEL: DWEK-7220**

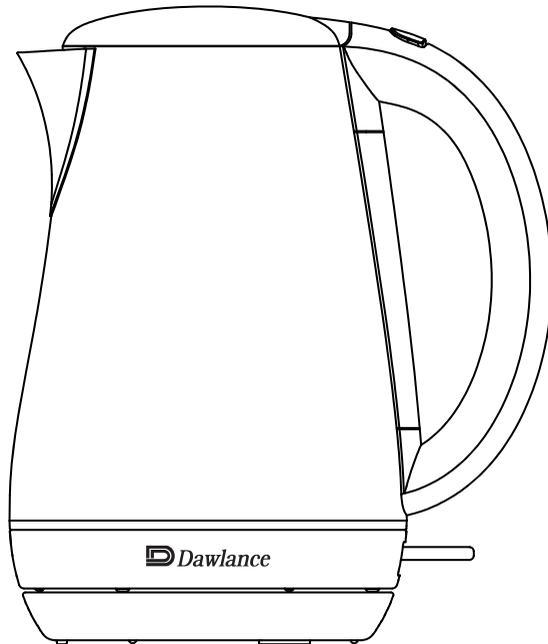

### Read This Manual

Inside you will find many helpful hints on how to use and maintain your Electric Kettle properly. Just a little prevention care on your part can save you a great deal of time and money over the life of your Electric Kettle. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.

## General safety instructions

- Before commissioning this device please read the instruction manual carefully.
- Please keep this instructions, the guaranty certificate, the sales receipt and, if possible, the carton with the inner packaging.
- The device is intended exclusively for private and not for commercial use!
- Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs. Switch off the device beforehand. Pull on the plug, not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device, do so in such a way that children do not have access to the device. Take care to insure that the cable does not hang down.
- Test the device and cable regularly for damage. If there is damage of any kind, the device should not be used.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not repair the device yourself, but rather consult an authorized expert.
- Keep the device and the cable away from heat, direct sunlight, moisture, sharp edges and such like.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
- Use only original accessories.
- If the kettle is overfilled, boiling water may be ejected.
- Do not use the device outdoors.

- Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into water.
- Use the device only for the intended purpose.
- The kettle is only to be used with the stand provided.

### **Special safety Instructions for this Machine**

- Use only cold water when filling.
- The water level must be under the MAX marks.
- Switch the machine off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior must be dry when the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- When the kettle is separated at the fault condition from the stand, the thermal cut-out could be reset.

### **First use of the Machine**

Before using the machine for the first time, water should be boiled twice without any additives.

1. Unwind the lead from the base. Place the machine on a flat surface.
2. Fill the kettle with water. Do not overfill.
3. Place the kettle flush on the base.
4. Electrical connection
  - Check whether the electrical voltage that you intend to use is the same as that of the machine. Details are to be found on the label on the base.
  - Only connect the machine to a properly grounded outlet according to the requirements of the rating label.

7. Switch the machine to position "1"
8. After boiling, the machine switches off automatically. Disconnecting the machine from the mains electricity supply. Do not press up the lid when pouring.

### **Cleaning**

Always remove the plug from the mains supply before cleaning the machine!

The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

### **Decalcification**

The decalcification intervals depend on the hardness of the water and frequency of use. Decalcification should be carried out every 3 to 4 months.

If the machine switches off before the water boils, it probably needs to be decalcification.

Please do not use vinegar but a commercially available decalcification agent on the basis of citric. Only use the quantities stated in the instruction.

This appliance conforms with the CE directives for radio interference suppression and low-voltage safety and has been built to meet current safety requirements. Subject to technical changes without prior notice!

- This appliance is not intended for use by persons (Including children) with reduced physical. Sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



**The widest service center network in the country with  
more than 200 outlets**



**Dawlance Reliable service is available for all  
household products**

**Services at your doorstep within 24 hours**

**Call Center Services available all week  
from 8:30am to 8:30pm**

**Service UAN # 021-111-11-7359 (RELY)**

**Head Office: Dawlance Center 7/4, Civil Lines-9**

**Dr. Ziauddin Ahmed Road, Karachi.**

**Ph: (021) 35652450-9**

**E-mail: [customer.service@dawlance.com.pk](mailto:customer.service@dawlance.com.pk)**

**Website: [www.dawlance.com.pk](http://www.dawlance.com.pk)**

**ڈاؤلینس ریلائبل ہے!**

 *Dawlance*

ریلائیبیل ہے!