

Dawlance
ڈاؤلینس ریلائبل ہے!

Dawlance

MICROWAVE OVEN

This owner's guide book is for the following 800 watts microwave oven mode:

DW-393 GSS



**Read these instructions carefully before using your microwave oven,
And keep it carefully.**

If you follow the instructions, your oven will provide you with many years of good service.

SERIAL NO.:

ڈاؤلینس ریلائبل ہے!

CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.....	2
SPECIFICATIONS.....	2
IMPORTANT SAFETY INSTRUCTIONS.....	3
GROUNDING INSTALLATION.....	5
MATERIALS YOU CAN USE IN MICROWAVE OVEN.....	7
MATERIALS TO BE AVOIDED IN MICROWAVE OVEN.....	8
SETTING UP YOUR OVEN.....	8
TURNTBALE INSTALLATION.....	9
INSTALLATION.....	10
OPERATING INSTRUCTIONS.....	11
TROUBLESHOOTING.....	16
DAWLANCE CUSTOMER SERVICE CENTERS NETWORK.....	17

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

Model:	DW-393 GSS
Rated Voltage:	230V~ 50Hz
Rated Input Power(Microwave):	1250 W
Rated Output Power(Microwave):	800 W
Rated Input Power(Grill):	1000 W
Oven Capacity:	23 L
Turntable Diameter:	∅ 270 mm
External Dimensions(WxDxH):	485mmX395.8mmX292.5 mm
Net Weight:	Approx. 13.3 kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning:** It is hazardous for anyone other than a competent person to remove a cover which gives protection against exposure to microwave energy.
3. **Warning:** Never allow children to use the oven without supervision unless adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
4. **Warning:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated. (only for grill series)
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapors in this appliance. This oven is especially designed to heat. It is not designed for industrial or laboratory use.

16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let the cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore take care when handling the container.
24. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
25. Children shall not play with the appliance.
26. Cleaning and user maintenance shall not be made by children without supervision.
27. Keep appliance and cord out of reach from children aged 8 or under
28. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
29. Appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The door or the outer surface may get hot when the appliance is operating.
31. The rear surface of the appliance shall be placed against a wall.
32. The microwave oven is designed to heat food and drink. Drying food or clothes and heating pillows, shoes, wet clothes, sponges and similar items may involve risks of injury or fire.
33. This appliance is intended to be used in household and similar applications such as: Personnel's kitchen areas at stores; Farms; For customers in hotels, motels and other residential places; Locals for stay and breakfast.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING


Electric Shock Hazard Improper use of the grounding can result in electric shock. Do not plug into an outlet until the appliance is properly installed and grounded.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the inside of the oven using a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighboring parts must be cleaned carefully with a damp cloth when they are dirty.

Two-round-pin plug

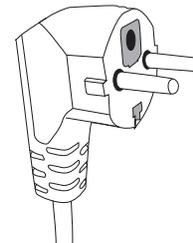

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CAUTION PERSONAL INJURY HAZARD

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

UTENSILS

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

UTENSIL TEST:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow the manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove the lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow the manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Grease-proof paper	Use as a cover to prevent splattering, retaining moisture or as a wrap for steaming

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN


UTENSILS	REMARKS
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

SETTING UP YOUR OVEN NAMES OF OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray.....	01
Turntable ring assembly.....	01
Instruction Manual.....	01
Cook Book.....	01

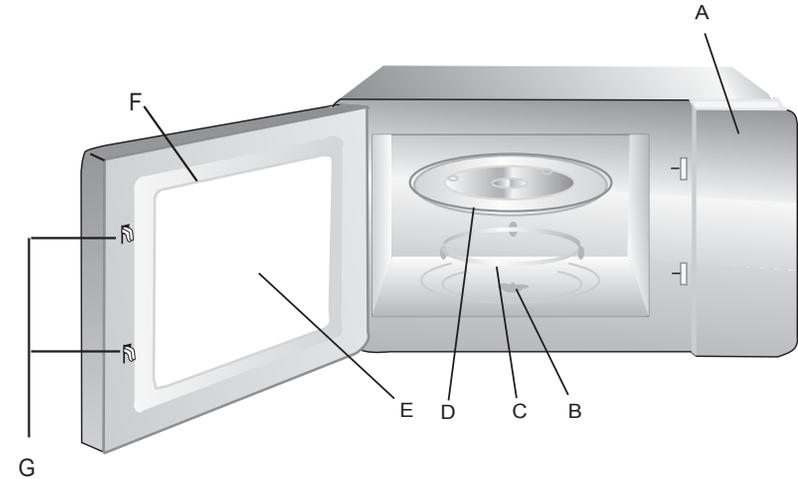


- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

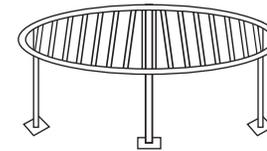

Grill Rack(Only for Grill series)

TURNTABLE INSTALLATION

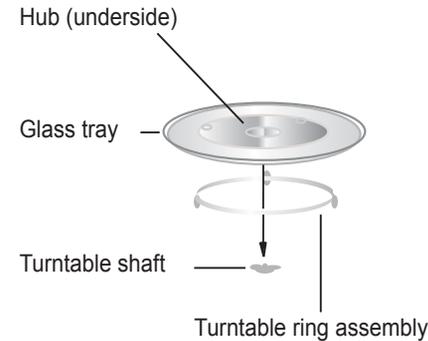

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if the oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. **Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.**

INSTALLATION

1. Select a level surface that provides enough open space for the intake and/or outlet vents.

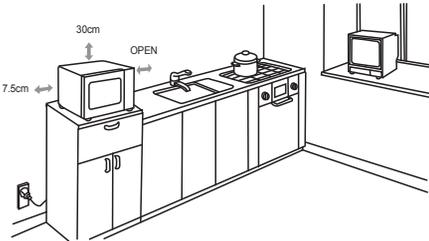

The rear surface of appliance shall be placed against a wall.

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

- (a) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (b) Do not remove the legs from the bottom of the oven.

- (c) Blocking the intake and/or outlet openings can damage the oven.
 - (d) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATING INSTRUCTIONS

1. CLOCK SETTING

When the microwave oven is electrified, the LED will display "0:00", the buzzer will ring once.



- 1) Press "**Clock/Kitchen Timer**" once, the hour figures will flash.
- 2) Press "**^** or "**v**" to adjust the hour figures, the input time should be within 0--23.
- 3) Press "**Clock/Kitchen Timer**" the minute figures will flash.
- 4) Press "**^** or "**v**" to adjust the minute figures, the input time should be within 0--59.
- 5) Press "**Clock/Kitchen Timer**" to finish clock setting. ":" will flash, and the time will light.

Note:

- 1) If the clock is not set, it would not function when powered.
- 2) During the process of clock setting, if you press "**Stop/Clear**", the oven will go back to its previous status automatically.

2. MICROWAVE COOKING

Press "**Microwave**" the LED will display "P100". Press "**Microwave**" for times or press "**^** or "**v**" to choose the power you want, and "P100", "P80", "P50", "P30" or "P10" will display for each added press. Then press "**Start/+30Sec./Confirm**" to confirm, and press "**^** or "**v**" to set cooking time from 0:05 to 95:00. Press "**Start/+30Sec./Confirm**" again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven using the following steps.

- 1) Press "**Microwave**" once, the screen displays "P100".
- 2) Press "**Microwave**" once again or press "**^** or "**v**" to choose 80% microwave power.
- 3) Press "**Start/+30Sec./Confirm**" to confirm, and the screen displays "P80".
- 4) Press "**^** or "**v**" to adjust the cooking time until the oven displays "20:00".
- 5) Press "**Start/+30Sec./Confirm**" to start cooking.

Note:The step quantities for the adjustment time of the coding switch are as follows:

0---1 min	:	5 seconds
1---5 min	:	10 seconds
5---10 min	:	30 seconds
10---30 min	:	1 minute
30---95 min	:	5 minutes

"MICROWAVE" PAD INSTRUCTIONS

Order	Display	Microwave Power
1	P100	100%
2	P80	80%
3	P50	50%
4	P30	30%
5	P10	10%

3. GRILL OR COMBI. COOKING

Press "Grill/Combi." the LED will display "G", and press "Grill/Combi." for times or press the "∧" or "∨" to choose the power you want, and "G", "C-1" or "C-2" will display for each added press. Then press "Start/+30Sec./Confirm" to confirm, and press "∧" or "∨" to set cooking time from 0:05 to 95:00. Press "Start/+30Sec./Confirm" again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press "Grill/Combi." once, the screen displays "G".
- 2) Press "Grill/Combi." once again or press "∧" or "∨" to choose combi. 1 mode.
- 3) Press "Start/+30Sec./Confirm" to confirm, and the screen displays "C-1".
- 4) Press "∧" or "∨" to adjust the cooking time until the oven displays "10:00".
- 5) Press "Start/+30Sec./Confirm" to start cooking.

"GRILL/COMBI." PAD INSTRUCTIONS

Order	Display	Microwave Power	Grill Power
1	G	0%	100%
2	C-1	55%	45%
3	C-2	36%	64%

Note: If half the grill time passes, the oven sounds twice, and this is normal. In order to have a better effect of grilling food, you should turn the food over, close the door, and then press "START/ +30SEC./ Confirm" to continue cooking. If no operation, the oven will continue working.

4. QUICK START

- 1) In waiting state, press "Start/+30Sec./Confirm" to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave, grill, combi. cooking or time defrost state, each press of "Start/+30Sec./Confirm" can increase 30 seconds of cooking time.
- 3) In waiting state, press "∧" or "∨" anti-clockwise to set cooking time with 100% microwave power, then press "Start/+30Sec./Confirm" to start cooking.

5. DEFROST BY WEIGHT

- 1) Press "Start/+30Sec./Confirm" once, and the oven will display "dEF1".
- 2) Press "∧" or "∨" to select the weight of food from 100 to 2000 g.
- 3) Press "Start/+30Sec./Confirm" to start defrosting.

6. DEFROST BY TIME

- 1) Press "Time Defrost" once, and the oven will display "dEF2".
- 2) Press "∧" or "∨" to select the defrost time. The MAX.time is 95 minutes.
- 3) Press "Start/+30Sec./Confirm" to start defrosting. The power is P30 and it cannot be adjusted.

7. AUTO MENU

- 1) Press "∧" to choose the menu, and "A-1" to "A-8" will display, which means pizza, meat, vegetable, pasta, potato, fish, beverage and popcorn.
- 2) Press "Start/+30Sec./Confirm" to confirm.
- 3) Press "∧" or "∨" to choose the default weight as the menu chart.
- 4) Press "Start/+30Sec./Confirm" to start cooking.

Example: If you want to use "Auto Menu" to cook fish for 350g.

- 1) Press "∧" clockwise till "A-6" displays.
- 2) Press "Start/+30Sec./Confirm" to confirm.
- 3) Press "∧" or "∨" to select the weight of fish till "350" displays.
- 4) Press "Start/+30Sec./Confirm" to start cooking.

THE MENU CHART:

Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360ml)	3
A-8 Popcorn	50 g	50
	85 g	85
	100 g	100

8. KITCHEN TIMER

- Press " **Clock/Kitchen Timer** " twice, LED will display 00:00.
- Press " **^** or **v** " to enter the correct time.(The maximum cooking time is 95 minutes.)
- Press " **Start/+30Sec./Confirm** " to confirm setting, the clock indicator will light up.
- When the kitchen time is reached, clock indicator will go out. The buzzer will ring 5 times. If the clock has been set (24-hour system), LED will display the current time.

Note: The kitchen time is different from the 24-hour system,Kitchen Timer is a timer.

9. MULTI-SECTION COOKING

- Press " **Time Defrost** " , once and the oven will display "dEF2".
- Press " **^** or **v** " to select the defrost time till "5:00" displays.
- Press " **Microwave** " once, the screen displays "P100".
- Press " **Microwave** " once again or press " **^** or **v** " to choose 80% microwave power.
- Press " **Start/+30Sec./Confirm** " to confirm and the screen displays "P 80".
- Press " **^** or **v** " to adjust the cooking time till the oven displays "7:00".
- Press " **Start/+30Sec./Confirm** " to start cooking and the buzzer will sound once for the first section, defrosting time counts down; the buzzer will sound once again entering the second cooking. When cooking finishes, the buzzer sounds five times.

10. INQUIRING FUNCTION

- In states of microwave, grill and combination cooking, press " **Microwave** ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to its former state;
- In cooking state, press " **Clock/Kitchen Timer** " to inquire the time and the time will display for 3 seconds.

11. LOCK-OUT FUNCTION FOR CHILDREN

Lock: In waiting state, press " **Stop/Clear** " for 3 seconds, there will be a long beep denoting entering the children-lock state and current time will display if the time has been set, otherwise, the LED will display " **⏸ : : ⏸** ".

Lock quitting: In locked state, press " **Stop/Clear** " for 3 seconds, there will be a long "beep" denoting that the lock is released.

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating, It is similar to the interference of small electrical appliances, like mixer, vaccum cleaner and electric fan. It is normal.
Dim Oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on a cool place like the oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed properly.	Close door properly.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

DAWLANCE CUSTOMER SERVICE CENTERS NETWORK

Head Office: Dawlance Center 7/4, Civil Lines-9, Dr. Zia uddin Ahmed Road, Karachi.

Ph: (021) 35652450-9 **Fax:** (021) 35674643 **Email:** service@dawlance.com.pk

For All Complaints, Please dial

03-111-11-7359(RELY) / 021-111-11-7359(RELY)

● KARACHI (ZONAL OFFICE)

Plot # Sc-7, Scheme # 7, Chandni Chowk, Off University Road.
Ph:(021) 34923708-9

● KARACHI

Plot # C-28C, 24th Commercial Street DHA Phase II Ext, DHA.
Ph:(021) 36066798, 34223739

● KARACHI

L-2526 Darakshan Society, Malir Kala Board Near Malir Town Office, Quaidabad.
Ph:(021) 34518261, 34518269

● HYDERABAD

Plot # A/ 151-A, Block C, Unit #2, Latifabad.
Ph:(022) 3864640, 3811216

● FAISALABAD (ZONAL OFFICE)

P-369, Jinnah Colony Behind Badar Bakery.
Ph:(041) 2619774, 2634067

● SAHIWAL

H #24/W, Scheme#2, Fareed Town.
Ph:(040) 4551313-3

● SUKKUR

H No. 1054/1-A, Bandar Road, Opp. Jama Masjid Near Edhi Center,
Ph:(071) 5625842, 5625214

● QUETTA

Gurdatt Singh Road, House # 53/3, Opp. Special Boys High School,
Ph:(081) 2833406

● SARGODHA

H No. 43-44, Dar Us Salama Rd, Sultan Colony Near Chenone Plaza, Sargodha Cant,
Ph:(048) 3765905-6

● MULTAN

H.# 12-A, Opposite Mohammad Arcade, Near Khana-e-Farhang Iran.
Ph:(061) 6524355, 4782835

● **LAHORE (ZONAL OFFICE)**

309A, Shadman Colony Shadman.
Ph:(042) 37533985-8

● **JHELUM (ZONAL OFFICE)**

B-II- IR, Mohammadi Chowk,
Ph:(054) 4610578, 4623236

● **RAWALPINDI (ZONAL OFFICE)**

36 - C - 1, Satellite Town.
Ph:(051) 111-11-RELY(7359),
4841074, 4451101

● **PESHAWAR**

House No: 06, Shadab Street, Near Gul
Haji Plaza, University
Road, Peshawar.
Ph:(091) 5841281,5842540

● **HASSANABDAL**

CB - 284 / 1, Near Barrier # 3, Mall Road,
Lalazar Colony, Wah Cantt.
Ph:(051) 4510895, 4530206

● **LAHORE**

2 / 1, Ghulam Ahmad Park, Near Saddar
Round About.
Ph:(042) 6684769, 8402037

● **GUJRANWALA**

Plot # 1, Street 1, Fatima Homes, Bukhari
Road, New Railway Station.
Ph:(055) 111-11-RELY(7359),
3856442,3857602

● **ISLAMABAD**

4- Chenab Market, Street No. 34,
G-7 / 1, Behind ZTE.
Ph:(051) 2202977, 2204498

● **SIALKOT**

Gulshan St # 1, Nishat Park, Paris Road,
Opp. Chamber of Commerce Building
Ph:(052) 4290502-3

Zonal Offices:

Zonal Manager Customer Service Karachi	(021)-34141501
Zonal Manager Customer Service Faisalabad	(041)-2638129
Zonal Manager Customer Service Lahore	(042)-35960272
Zonal Manager Customer Service Jhelum	(054)-4271406
Zonal Manager Customer Service Rawalpindi	(051)-4846409
Central Store	(021)-34141444

